Abnormal Indication for OSADA PETIT CLAVE 8

During the sterilization cycle, if 「Er□」 is indicated, self-diagnostic function is in action.

Please check the following points.

Please check the following points.		
Error	Content/Source of	Countermeasures
Indi.	trouble	
Er 0	Memory Error	1) Press the stop key and operate once again.
	Powerful noise from Outside.	2) If it is not effective, stop operating and send for repair.
Er 1	Heater Sensor Error	Stop operating and send for repair.
L	Short circuit or break of	Stop operating and send for repair.
	Sensor.	
Er 2	Abnormal Temperature	1) Press the stop key, open the door and confirm
	Rise of Heater	the water quantity. If it is short, fill water up to
	1) Because of less water,	container rack surface, after the equipment is
	heater got abnormally	cooled down, start it once again.
	heated.	2) If the problem is not controlled, please stop
	2) Might be the failure of	using and send for repair.
Er 2.	heater control sensor.	1) Dross the stap key and after the equipment is
□ □ ∠.	Heat Abnormality in the chamber	1) Press the stop key and after the equipment is cooled down and start it again.
	The temperature in	2) If the problem is not controlled, please stop
	chamber does not rise.	using and send for repair.
	2) Might be the failure of	aonig and come to repain
	steam control sensor.	
Er 3	The temperature in the	1) Press the stop key and after the equipment is
	chamber did not rise in	cooled down, open the door, clean the walls of
	fixed hours	the chamber and door packing and start using
	1) Steam leakage was there.	again.
	2) Might be the failure of	2) If the problem is not controlled, please stop using and send for repair.
	heater or electro-	using and send for repair.
	magnetic valve.	
Er 6	After the start, opened	1) Press the stop key, close the door then,
	the door.	operate once again.
		2) If the problem is not controlled, please stop
Г., 7	Develop the extensilization	using and send for repair.
Er 7	During the sterilization cycle, the temp. of less	1) Press the stop key, after the equipment is
	than 135°C continued	cooled down, start it once again. 2) If the problem is not controlled, please stop
	for more than 5 min.	using and send for repair.
Er 8	Abnormal over-pressure	1) Press the stop key, after the equipment is
	Safety switch of pre-	cooled down, start it once again.
	ssure regulator worked.	2) If the problem is not controlled, please stop
F .		using and send for repair.
Er 9	The control sensor	1) Press the stop key, after the device is cooled
	inside the chamber got	down, start it once again. 2) If the problem is not controlled, please stop
	breaking or short circuit.	using and send for repair.
Er R	Power failure occurred	Press the stop key and operate once again.
dor	Without closing the	Close the door and start.
	door, the sterilization	
	was started.	
cHP	Information of the	As the time of inspection has come, call for the
	Inspection Time	inspection for the device.
		In case continuously using the equipment, press
		the power key and deactivate the indication, then
		start operating again. (Till the inspection practiced, whenever the power.)
		(Till the inspection practiced, whenever the power connected, this indication continues to appear.).
L		oormootou, tino maloation continues to appear.).